



WE-EF LEUCHTEN

Installation and Maintenance
Instructions

Projector

FLD111 Spigot mounted



Do not open during installation

This product is factory-sealed.
Refer to the instructions contained in this document for details.



Surge Protection


This product features built-in surge protection circuitry in compliance with applicable standards.

For comprehensive protection of a luminaire installation against lightning and electrical surges, it is essential to cover mains supply and data input lines at the distribution board level, by using respective primary (Type 1) and secondary (Type 2) surge arrestors in compliance with EN61643-11/ IEC61643-1.

Warning

Ensure that all required surge protection measures are in place and activated prior to luminaire installation. Also, disconnect luminaires before operating high-power devices such as, for example, electrical arc welders.

Projector

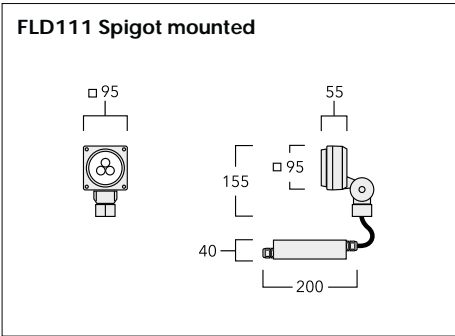

IP66, Class I, ta = 40°C


Mounting Accessories

Flat surface fitter


SF-FLD1 for FLD111 Spigot mounted **145-9535**

Column fitter

CF-FLD1 for FLD111 Spigot mounted **145-9536**

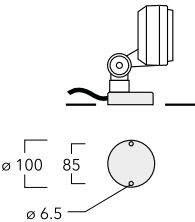

SF-FLD1

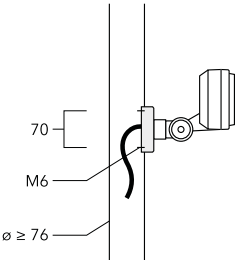

CF-FLD1

Light Source

LED

Maintenance

Apart from cleaning the product's exterior surfaces, no special maintenance work is required.

Do not use high-pressure cleaners.

In case of component failure due to abnormal circumstances or at end of life, replacement must be carried out by a suitably qualified and trained professional.

Warning: Do not open luminaire while mains supply is switched on.

Installation





The product must be installed and maintained by a suitably qualified professional in compliance with latest building/construction and/or electrical regulations and relevant legislation.

Warning: Switch off mains electrical supply prior to installing and connecting the luminaire.


Notice: If the luminaire is modified by anybody other than the original manufacturer, then the warranty will no longer be valid and shall become the full responsibility of the modifying person/organisation. Claims based on defects attributable to improper installation and/or application, and the consequences thereof, are excluded.

The installation on site must comply with local and/or national health and safety regulations.

Installation Procedure
Installation - Flat surface fitter
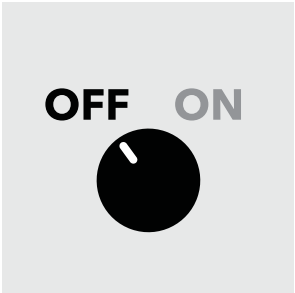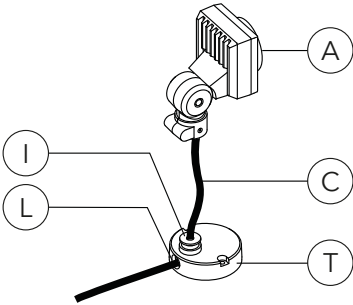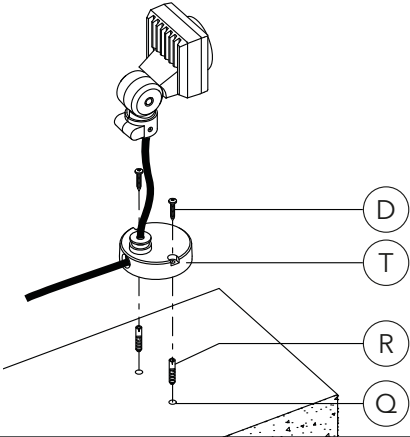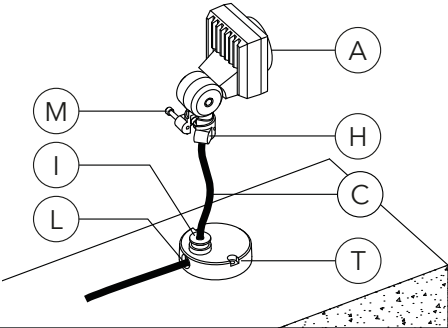
<p>1) Switch off mains electrical supply.</p> 	<p>2) Feed cable C from luminaire A through pivot I and hole L of flat surface fitter T.</p> 
<p>3) Determine positions for fixing screws D. Drill relevant holes Q and insert nylon plugs R. Insert and tighten screws D. Warning: Ensure not to damage any electric cable, water pipe or other items drilling holes.</p> 	<p>4) Loosen screw M on slipfitter H (do not turn out) until slipfitter can be opened. Connect luminaire A with flat fitter T by sliding slipfitter H over pivot I, while pulling luminaire cable C through hole L and turning luminaire A towards object to be illuminated. Ensure slipfitter H is properly seated on pivot I, then tighten screw M.</p> 

- 5) Release screw **P** and open control gear box **J**.
Feed luminaire cable **C** through cable gland **U** and connect leads to terminal block **V**: The red to '+', the black to '-'. Tighten cable gland **U**.

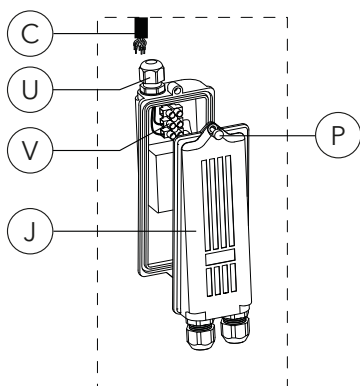

- 6) Check that rating shown on luminaire label conforms with mains electrical supply.

we-ef

04/19 IP66 **CE**

FLD111-LED → 220-240V50-60/Hz

145-XXXX

SOE XXXXXXXX

LED 3000K 6W


item no. XXX

(example)


- 7) Feed mains supply cable **G** (and the second cable **Y** for through wiring) through cable glands **K** and connect leads to respective terminals in terminal block **S**:

- a) ON/OFF (L = Phase, N = Neutral, ⊕ = Earthing)
b) 1-10 V/DALI (L = Phase, N = Neutral, ⊕ = Earthing, DA/DA = DALI control line, D-/D+ = 1-10 V control line).

Tighten cable gland(s) **K**. Close gear box **J** and tighten screw **P**.

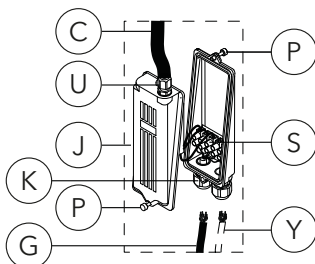

- 8) Loosen screws **N** and **O** slightly. Then aim luminaire in desired direction and tighten screws **N** and **O**.

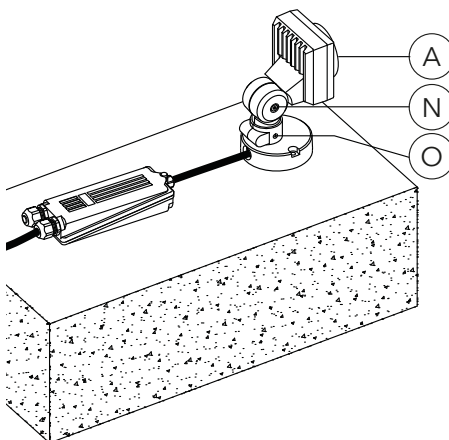


Installation Procedure


Installation - Column fitter

Suitable for column diameter ≥ 76 mm. Service door on column has to be provided for cable termination (maximum 1.5 m from column fitter mounting position).


- 1) Switch off mains electrical supply.

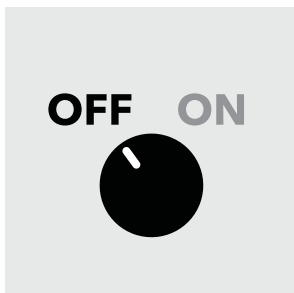


- 2) Determine position for fixing screws **D** and cable entry hole **F**. Drill relevant holes **E** (thread type M6) and **F** on column **X**. Ensure cable entry hole **F** has sufficient diameter to feed cable from luminaire.

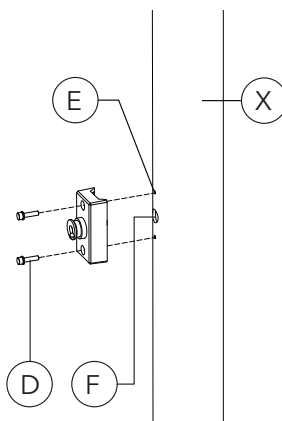


- 3) Set and fix column fitter **B** in position. Insert and tighten screws **D**.
Loosen screws **M** on slipfitter **H** (do not turn out) until the slipfitter can be opened.

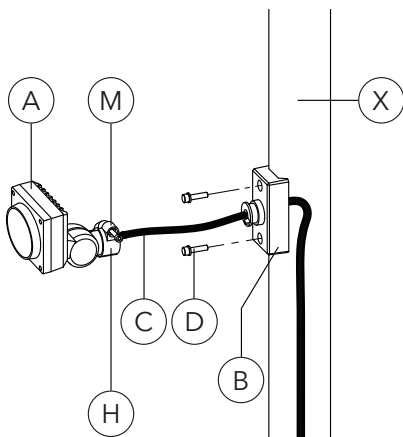

- 4) Feed cable **C** from luminaire **A** through pivot **I** on column **X**, while connecting luminaire **A** with column fitter **B** by sliding slipfitter **H** over pivot **I**. Turn luminaire **A** towards object to be illuminated. Ensure slipfitter **H** is properly seated on pivot **I**, then tighten screw **M**.

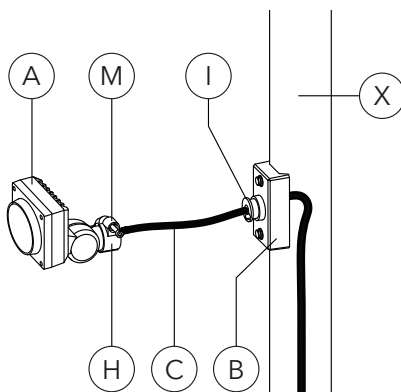

- 5) Release screw **P** and open control gear box **J**.
Feed luminaire cable **C** through cable gland **U**
and connect leads to terminal block **V**: Red to
'+', Black to '—'. Tighten cable gland **U**.

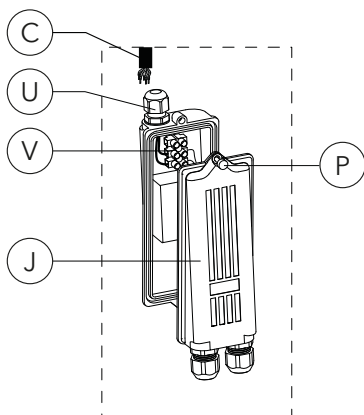

- 6) Check that rating shown on luminaire label
conforms with mains electrical supply.

we-ef

04/19 IP66 **CE**

FLD111-LED → 220-240V50-60/Hz

145-XXXX

SOE XXXXXXXX

LED 3000K 6W

item no. XXX


(example)

- 7) Feed mains supply cable **G** (and the second
cable **Y** for through wiring) through cable
glands **K** and connect leads to respective
terminals in terminal block **S**:


a) ON/OFF (L = Phase, N = Neutral,
⊕ = Earthing)

b) 1-10 V/DALI (L = Phase, N = Neutral,
⊕ = Earthing, DA/DA = DALI control line,
D–/D+ = 1-10 V control line).

Tighten cable gland(s) **K**. Close gear box **J**
and tighten
screw **P**.

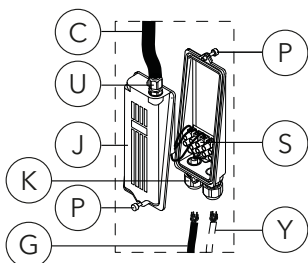

- 8) Loosen screws **N** and **O** slightly. Then aim
luminaire in desired direction and tighten
screws **N** and **O**.

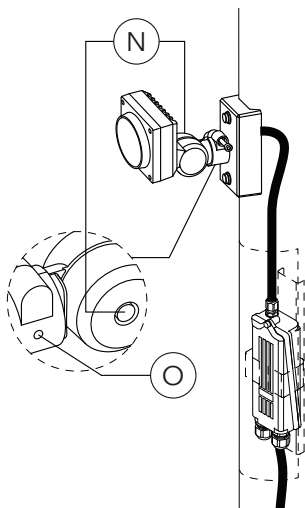



www.we-ef.com

WE-EF LEUCHTEN

Germany

Tel +49 5194 909 0

Fax +49 5194 909 299

info.germany@we-ef.com

WE-EF LUMIERE

France

Tel +33 4 74 99 14 44

Fax +33 4 74 99 14 40

info.france@we-ef.com

WE-EF HELVETICA

Switzerland

Tel +41 22 752 49 94

Fax +41 22 752 49 74

info.switzerland@we-ef.com

WE-EF LIGHTING

Thailand

Tel +66 2 738 9610

Fax +66 2 175 2174

info.asiapacific@we-ef.com

WE-EF LIGHTING

Australia

Tel +61 3 8587 0444

Fax +61 3 8587 0499

info.australia@we-ef.com

WE-EF LIGHTING

United States of America

Tel +1 724 742 0030

Fax +1 724 742 0035

info.usa@we-ef.com

TO9217W1122 © WE-EF 2022

Technical specifications are
subject to change.

WE-EF LEUCHTEN

Installation and Maintenance
Instructions

Accessories

Flat surface fitter
Ground Spike
Column fitter
Junction box



Do not open during installation

This product is factory-sealed.
Refer to the instructions contained
in this document for details.



Surge Protection

This product features built-in surge protection circuitry in compliance
with applicable standards.

For comprehensive protection of a luminaire installation against lightning
and electrical surges, it is essential to cover mains supply and data input
lines at the distribution board level, by using respective primary (Type 1)
and secondary (Type 2) surge arrestors in compliance with EN61643-11/
IEC61643-1.





Warning

Ensure that all required surge protection measures are in place and
activated prior to luminaire installation. Also, disconnect luminaires
before operating high-power devices such as, for example, electrical
arc welders.

Accessories

Suitability

- 1. FLB100 Spigot mounted
- 2. FLC300 Spigot mounted
- 3. FLD100 Spigot mounted
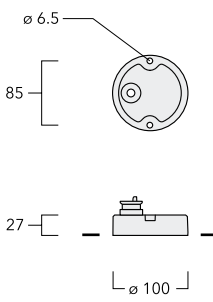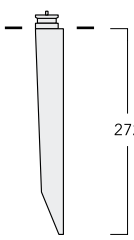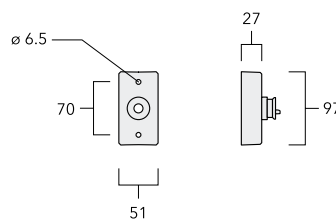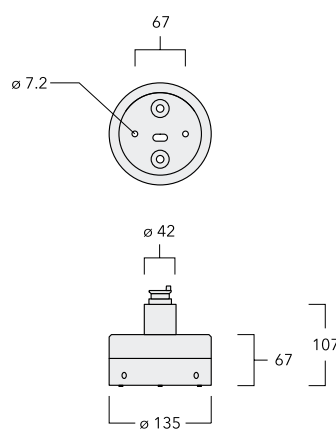
<div><p>Flat surface fitter 145-9535</p></div>	<div><p>Ground spike 310-9102</p></div>
<div><p>Column fitter 145-9536</p></div>	<div><p>Junction box (Side entry - cable) 310-9002 Junction box (Side entry - conduit) 310-9022 Junction box (Wall entry) 310-9025</p></div>

Installation

The product must be installed and maintained by a suitably qualified professional in compliance with latest building/construction and/or electrical regulations and relevant legislation.

Warning: Switch off mains electrical supply prior to installing and connecting the luminaire.

Notice: If the luminaire is modified by anybody other than the original manufacturer, then the warranty will no longer be valid and shall become the full responsibility of the modifying person/organisation. Claims based on defects attributable to improper installation and/or application, and the consequences thereof, are excluded.


Installation instruction of each luminaire will be separated document.

The installation on site must comply with local and/or national health and safety regulations.

Installation Procedure

Flat surface fitter


- 1) Feed cable from luminaire through pivot and cable gland of flat surface fitter **A**.

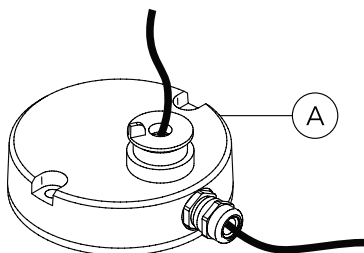

- 2) Determine position for fixing screws **D***.
Drill relevant holes **E** and insert nylon plugs **R***.
Insert and tighten screws **D**. After installation of luminaire, tighten cable gland.


Warning: Ensure not to damage any electrical cable, water pipe or other items drilling holes.

* Not supplied by WE-EF

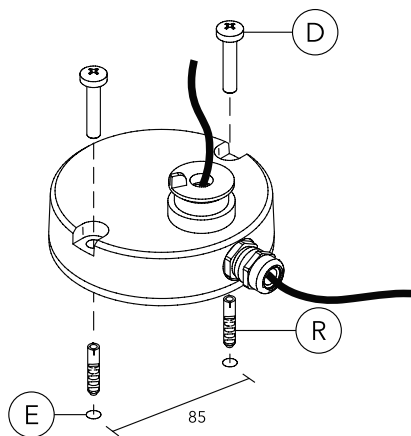


Column fitter

- 1) Drill screw holes **A** and cable entry hole **B** in column. Ensure cable entry hole **B** has sufficient diameter to feed cable from luminaire.

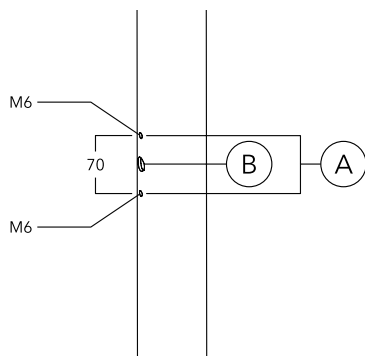


- 2) Set and fix column fitter **C** in position.
Insert and tighten screws **D**.

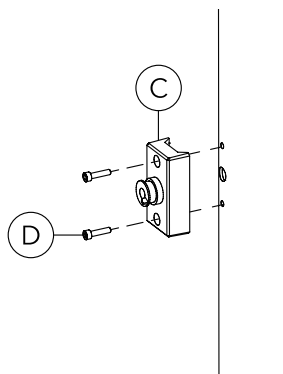


Ground Spike

 
- 1) **Note:** It is the responsibility to installer to ensure the suitability of the ground spike for site-specific conditions.

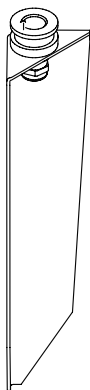

- 2) Place ground spike **H** into the ground.

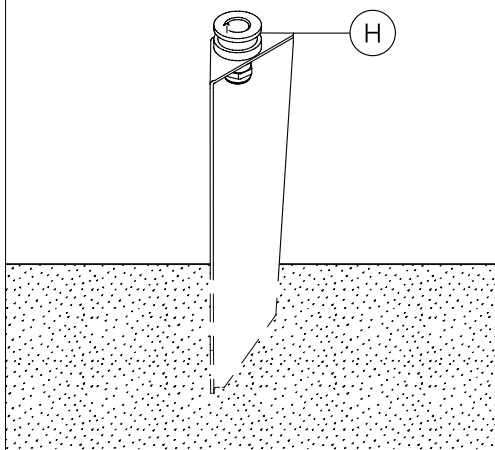


- 3) Feed cable from luminaire through pivot and cable gland **I**. After installation of luminaire, tighten cable gland **I**.

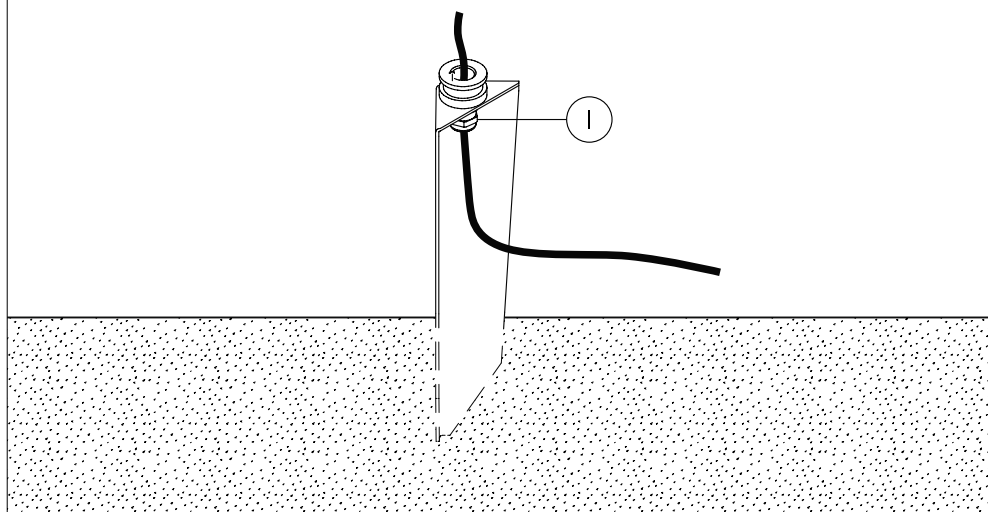


Junction box

- 1) Loosen screws **K** and remove cover **L** from body **M**.

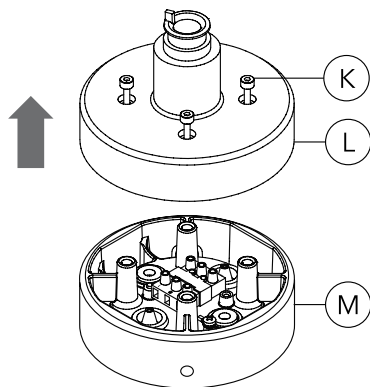

- 2) Feed main supply cable **R** through wall entry or side entry of body **M**.

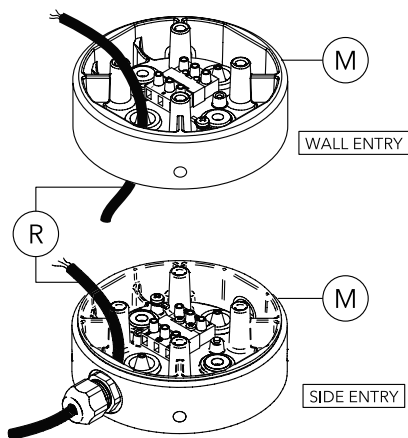


For side entry installations, replace the pre-installed plugs with provided cable glands as required.


- 3) Determine position for fixing screws **N***. Drill relevant holes **O** and insert nylon plugs **P***. Insert screws **N** with washers **Q** and tighten.

Warning: Ensure not to damage any electrical cable, water pipe or other items drilling holes.


* Not supplied by WE-EF

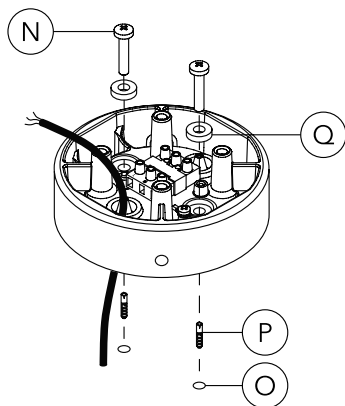

- 4) Feed cable **S** from luminaire through pivot of cover **L**. Connect cable **R** and **S** to terminal block **T** according to wiring shown in separate luminaire installation instruction.

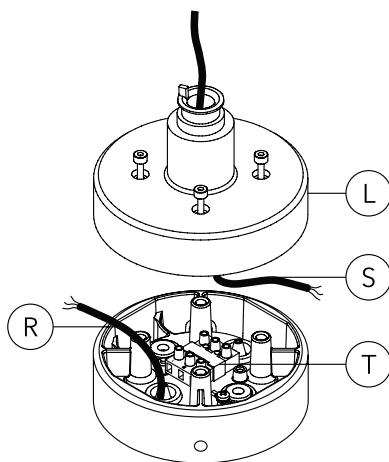

5) After installation of luminaire, place cover **L** on body **M** and tighten screws **K**.

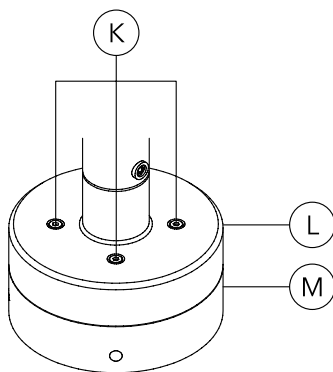



www.we-ef.com

WE-EF LEUCHTEN

Germany

Tel +49 5194 909 0

Fax +49 5194 909 299

info.germany@we-ef.com

WE-EF LUMIERE

France

Tel +33 4 74 99 14 44

Fax +33 4 74 99 14 40

info.france@we-ef.com

WE-EF SWITZERLAND

Switzerland

Tel +41 22 752 49 94

Fax +41 22 752 49 74

info.switzerland@we-ef.com

WE-EF LIGHTING

Thailand

Tel +66 2 738 9610

Fax +66 2 175 2174

info.asiapacific@we-ef.com

WE-EF LIGHTING

Australia

Tel +61 3 8587 0444

Fax +61 3 8587 0499

info.australia@we-ef.com

WE-EF LIGHTING

United States of America

Tel +1 724 742 0030

Fax +1 724 742 0035

info.usa@we-ef.com

TO9253W1124 © WE-EF 2024

Technical specifications are
subject to change.