

## www.we-ef.com

WE-EF LEUCHTEN Germany Tel +49 5194 909 0 Fax +49 5194 909 299 info.germany@we-ef.com

## WE-EF LUMIERE

France Tel +33 4 74 99 14 44 Fax +33 4 74 99 14 40 info.france@we-ef.com

### WE-EF HELVETICA

Switzerland Tel +41 22 752 49 94 Fax +41 22 752 49 74 info.switzerland@we-ef.com

### WE-EF LIGHTING

United Kingdom Tel +44 844 880 5346 Fax +44 844 880 5347 info.uk@we-ef.com

PFL540-LED\_010917 / 006-1052

© WE-EF 2017

Technical specifications are subject to change.

# WE-EF LIGHTING Thailand Tel +66 2 738 9610 Fax +66 2 175 2174 info.asiapacific@we-ef.com

WE-EF LIGHTING

Australia Tel +61 3 8587 0444 Fax +61 3 8587 0499 info.australia@we-ef.com

## WE-EF LIGHTING

United States of America Tel +1 724 742 0030 Fax +1 724 742 0035 info.usa@we-ef.com

Safety indices The manufacturer is then discharged from liability when damage is caused by improper use or installation.

If any luminaire and/or accessory is subsequently modified, the persons responsible for the modification shall be considered as manufacturer.



### **WE-EF LEUCHTEN**

we-ef

Installation and Maintenance Instructions for Post Mounted Luminaire PFL540 LED

## **Post Mounted Luminaires**

## Lamps

24 LED 55W / 36 LED 82W / 48 LED 109W (700 mA) 24 LED 72W / 36 LED 108W / 48 LED 144W (1000 mA) 3000K / 4000K / 5000K

Protection: IP66

Class I, II 𝖾 , ta = 25°C

Mounting height:
Weight: max. 15,0 kg
Windage area: max. 0,23 m <sup>2</sup>

Installation: horizontal, light output downwards,

optional, for pole spigot **D** = 60 x 100 mm or for pole spigot **D** = 76 x 80 mm

Ø 9 - 14 mm 🕂



#### Installation

The luminaire must be installed and maintained by a suitably qualified person in compliance with latest construction and electrical regulations and relevant legislation.

**<sup>4</sup> Attention:** Dangerous voltage, open luminaire only after mains electrical supply is switched off!

In case of questions please contact our technical hotline: +61 3 8587 0444 (from Monday - Friday from 08.00 until 16.00 hours.

## Installation Procedure

## Luminaire prewired, do not open!

- 1) Switch off the mains electrical supply. 7
- B shows the setting III for a cable diameter of 9-10 mm.

- 3) Loosen screws D and take off cover C. Pull connecting cable through the pole. Feed power cable down pole to termination door. Place luminaire onto the pole resp. accretion and tighten the fixing screws D resp. E of the luminaire with a tightening torque of 5 Nm. Replace cover C and tighten screws B. Terminate luminaire.
- 4) Removal

Switch off the mains electrical supply. hRemove is the reverse of the above procedure.

## Maintenance

Apart from cleaning the outside of the luminaire no special maintenance work is necessary.

