

WE-EF LEUCHTEN


Installation and Maintenance Instructions for Bollards CFY200 Series KTY200 Series ZFY200 Series





Bollards

IP66, IK10, Class I, II, ta = 25°C

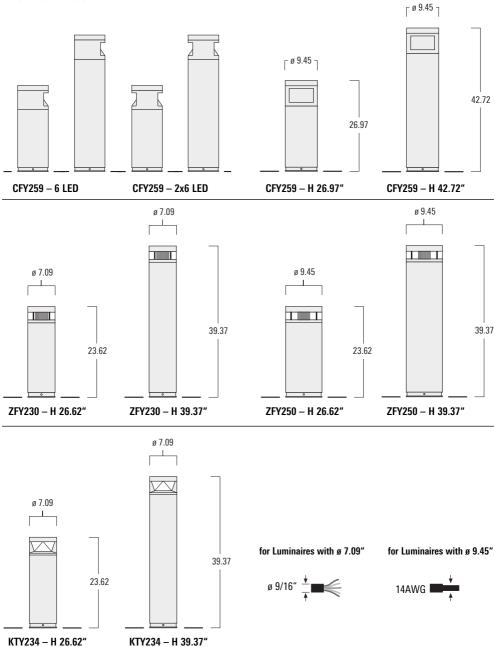

Light source

CFY259

6 LED 12W - 700 mA* / 18W - 1050 mA* 2x 6 LED 24W - 700 mA* / 36W - 1050 mA*

ZFY230 / ZFY250

LED-FT 12W - 350 mA* LED-FT 17W - 500 mA* LED-FT 24W - 700 mA*

KTY234

3 LED 9W - 1050 mA* 3 LED 13W - 1400 mA* 6 LED 18W - 1050 mA* 6 LED 36W - 1400 mA*

* Nominal power, for latest data refer to www.we-ef.com

Maintenance

Apart from cleaning the product's exterior surfaces, no special maintenance work is required. Do not use high-pressure cleaners.

In case of component failure due to abnormal circumstances or at end of life, replacement must be carried out by a suitable and trained professional.

Protect our environment: Discard used LEDs in compliance with the most recent environmental legislation.

Warning

Do not open luminaire while mains electrical supply is switched on. ${\not\!\!\!\!/}$

Mounting Accessories

Planted root - Galvanised steel.

ESV4	for KTY234 / ZFY230	665-9302	7.05 lb
ESV4	for CFY259 / ZFY250	697-8010	9.48 lb

Optical Accessories**


IL-180	Cut-off shield for KTY234	638-8201	

IL-180 Cut-off shield ZFY230 / ZFY250 638-8200

** please specify when ordering

Tools required

- Screwdriver TX25
- Screwdriver TX40
- Screwdriver Philips size 2
- Screwdriver with blade 3x1
- Spanner size 13

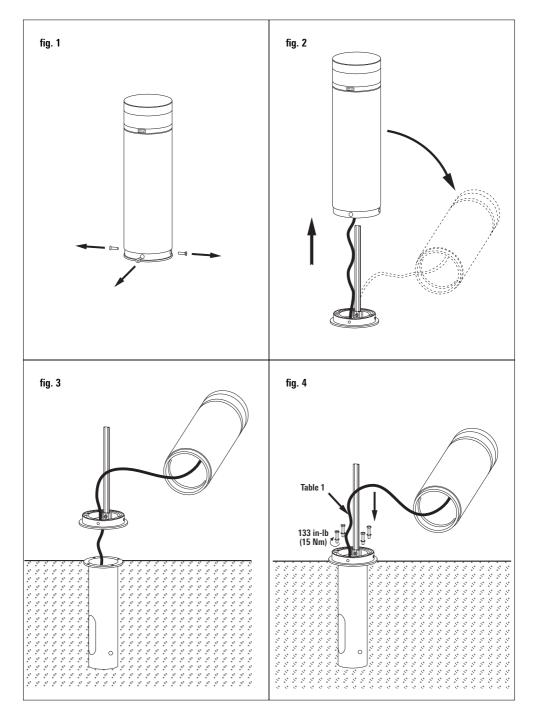

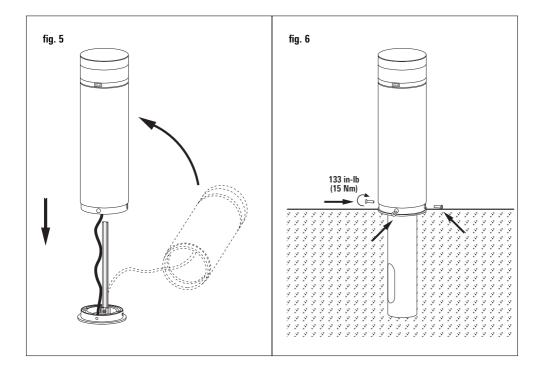


Table 1 Connecting EK						
	ON/OFF	0-10V				
L	Х	Х				
Ν	Х	Х				
* ۵	Х	Х				
D +	-	Х				
D –	-	Х				
L 2	-	-				
* not available in class II						

Table 2 Torque			
Screw		Torque	
M4	max.	17.7 in–lb	(2 Nm)
M5	max.	35.4 in-lb	(4 Nm)
M6	max.	53.1 in–lb	(6 Nm)
M8	max.	133 in–lb	(15 Nm)
M16	max.	885 in–lb	(100 Nm)

Product Information / Surge Protection

This luminaire can be fitted with a surge protection device of type 2-3. The technical data are provided directly on the installed device. If the power supply is switched on, a green LED indicates that it is operational. If the surge protector has been triggered by an adverse event, the luminaire is automatically disconnected from the mains. In that case, the LED on the surge protector no longer lights up.

For comprehensive protection of the luminaire against lightning and electrical surges, primary (Type 1) and secondary (Type 2) surge arrestors must be installed into the power supply.

The technical planner/installer is responsible for the proper selection, sizing and installation of the surge protection modules that must be provided on site. Please note the various protection levels for Class I and II, as well as the applicable statutory provisions regarding surge protection. Installation and maintenance may only be performed by a qualified electrician.



www.we-ef.com

WE-EF LEUCHTEN

Germany Tel +49 5194 909 0 Fax +49 5194 909 299 info.germany@we-ef.com

WE-EF LUMIERE

France Tel +33 4 74 99 14 44 Fax +33 4 74 99 14 40 info.france@we-ef.com

WE-EF HELVETICA

Switzerland Tel +41 22 752 49 94 Fax +41 22 752 49 74 info.switzerland@we-ef.com

WE-EF LIGHTING

United Kingdom info.uk@we-ef.com

WE-EF LIGHTING

Thailand Tel +66 2 738 9610 Fax +66 2 175 2174 info.asiapacific@we-ef.com

WE-EF LIGHTING

Australia Tel +61 3 8587 0444 Fax +61 3 8587 0499 info.australia@we-ef.com

WE-EF LIGHTING

United States of America Tel +1 724 742 0030 Fax +1 724 742 0035 info.usa@we-ef.com

CFY_KTY_ZFY200_011119_US Technical specifications are subject to change. © WE-EF 2019

Safety indices

The manufacturer is then discharged from liability when damage is caused by improper use or installation.

If any luminaire and/or accessory is subsequently modified, the persons responsible for the modification shall be considered as manufacturer.