Safety Notice

The manufacturer is discharged from liability when damage is caused by improper use or installation.

If any luminaire and/or accessory is subsequently modified, the persons responsible for the modification shall be considered as manufacturer.

we-ef

WE-EF LIGHTING



Installation and Maintenance Instructions for Surface mounted exterior downlights DAC110 LED DAC120 LED




WE-EF LIGHTING USA Tel +1 724 742 0030 info.usa@we-ef.com

we-ef.com

DAC110/120_LED_070622 / 006-1687 Technical specifications are subject to change. © WE-EF 2022

Surface Mounted Exterior Downlights

IP66, IK07

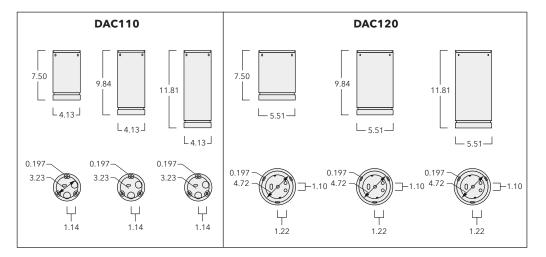

Light source

DAC110	Class I, ta = 25 °C Weight
* Nominal power, for latest data refer to www.we-ef.com ø 0.276 - 0.394 in ‡	DAC110, H 7.50 4.4 lb DAC110, H 9.84
max. 2 x 16 AWG /	DAC120, H 7.50 5.7 lb DAC120, H 9.84 6.6 lb DAC120, H 11.81 7.3 lb

Tools required

- Screwdriver with 3.0 mm x 0.8 mm blade - Torx key TX15 / TX20 - 21 mm wrench - Allen key 2,5 mm / 3 mm

Installation

The product must be installed and maintained by a suitably qualified professional in compliance with latest building/construction and/or electrical regulations and relevant legislation.

Notice: If the luminaire is modified by anybody other than the original manufacturer, then the warranty will no longer be valid and shall become the full responsibility of the modifying person/ organisation. Claims based on defects attributable to improper installation and/or application, and the consequences thereof, are excluded.

In case of component failure, LED replacement due to abnormal circumstances or at end of life,

Installation Procedure

1) Switch off the mains electrical supply. 4



replacement must be carried out by a suitably qualified and trained professional.

In case of questions please contact our technical hotline: +1 724 742 0030 (from Monday - Friday from 08.00 until 16.00 hours).

Maintenance


Apart from cleaning the product's exterior surfaces, no special maintenance work is required. Do not use high-pressure cleaners.


Protect our environment: Discard used LEDs in compliance with the most recent environmental legislation.



 Loosen threaded pins A and pull ceiling mount section B upwards.

For H250 and H300: Additionally loosen the fastening screws E from cover F and remove cover F from the ceiling mounting B.

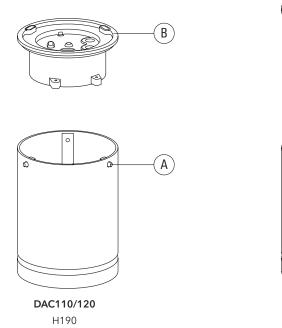

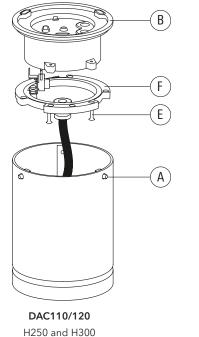



Prepare the mounting surface, guide the connection line through the cable glands/cable bushings G and fasten the ceiling mount section
B to the ceiling with the screws J.

Fixture should be anchored into a structural element, if not anchored directly to recessed junction box.

For DAC120: If the second cable gland is not used, take the blind plugs from the accessory pack.


ATTENTION: Please ensure that no electrical cables, water pipes or other devices are damaged while drilling.

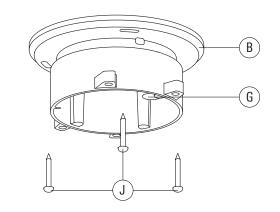

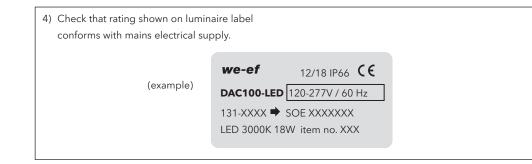


5) Connect the power supply line (s) to the corresponding positions on terminal **H**. a) **ON / OFF** (L = phase, protective conductor, N = Neutral conductor) b) **0-10V** (L = phase, N = neutral conductor, = protective conductor, D - / D + = 1 - 10V control line) For DAC120: Tighten the cable glands G. 0 C N 🕀 L 3pol B 、5pol N L 🕀 D+ D-(G` Û Ή \bigcirc

6) Place the lower part of the luminaire housing D on the ceiling mount section B, make sure that the connector makes contact and tighten the threaded pins A firmly. For H250 und H300: Fix cover F so that the connector comes into contact and tighten the screws E firmly. Place the lower part of the luminaire housing D on the ceiling mount section B and tighten the threaded pins A firmly.

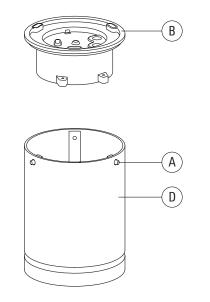

DAC110/120 H 7.50

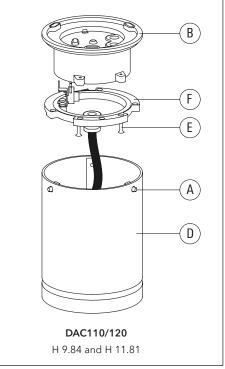

7) When using a diffusion lens IO-180, the light distribution must be observed during installation! (See image) Luminaire Orientation Light distribution IO-180 DAC110 DAC120