## **Safety Notice**

The manufacturer is discharged from liability when damage is caused by improper use or installation.

If any luminaire and/or accessory is subsequently modified, the persons responsible for the modification shall be considered as manufacturer.

# we-ef



## **WE-EF LIGHTING**

Installation and Maintenance Instructions for Surface mounted exterior downlights

**DAS100 PM LED** 




WE-EF LIGHTING USA Tel +1 724 742 0030 info.usa@we-ef.com

we-ef.com

DAS100 PM\_LED\_190522 / 006-1688 Technical specifications are subject to change. © WE-EF 2022

## **Surface Mounted Exterior Downlights**

IP66, IK07

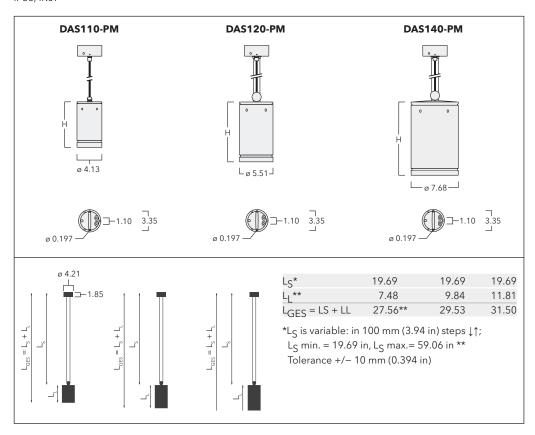

Light source	
DAS110-PM 6 LED 12W*	Weight
DAS120-PM 12 LED 24W*	DAS110-PM, H 7.48 5.1 lb
DAS140-PM 24 LED 48W*	DAS110-PM, H 9.84 5.7 lb
* Nominal power, for latest data refer to	DAS110-PM, H 11.81
www.we-ef.com	DAS120-PM, H 7.48 6.4 lb
Class I, ta = 25 °C	DAS120-PM, H 9.84 7.1 lb
ø 0.276 - 0.394 in 🛊	DAS120-PM, H 11.81 7.7 lb
\$ 0.270 0.374 III A	DAS140-PM, H 7.4813.2 lb
2 x 16 AWG / +	DAS140-PM, H 9.8414.3 lb
1 x 14 AWG •	DAS140-PM, H 11.8115.4 lb





# **Tools required**

- Screwdriver with 3.0 mm x 0.8 mm blade
- Torx key TX15 / TX20

- 21 mm wrench
- 3 mm Allen key

## Installation

The product must be installed and maintained by a suitably qualified professional in compliance with latest building/construction and/or electrical regulations and relevant legislation.

**Notice:** If the luminaire is modified by anybody other than the original manufacturer, then the warranty will no longer be valid and shall become the full responsibility of the modifying person/organisation. Claims based on defects attributable to improper installation and/or application, and the consequences thereof, are excluded.

In case of component failure, LED replacement due to abnormal circumstances or at end of life, replacement must be carried out by a suitably qualified and trained professional.

In case of questions please contact our technical hotline: +1 724 742 0030 (from Monday - Friday from 08.00 until 16.00 hours).

## Maintenance

Apart from cleaning the product's exterior surfaces, no special maintenance work is required. Do not use high-pressure cleaners.


Protect our environment: Discard used LEDs in compliance with the most recent environmental legislation.




1) Switch off the mains electrical supply.  $\ref{eq:posterior}$ 




2) Loosen threaded pins **B** and pull ceiling mount section **C** upwards.

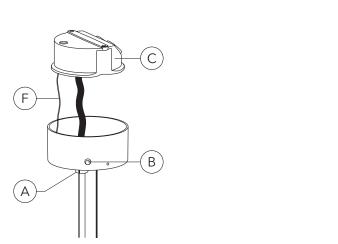

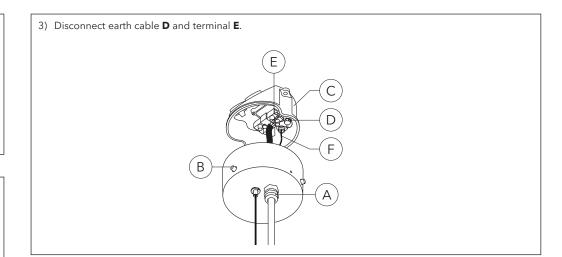


4) Detach lanyard **F** by loosening safety wheel **G**, push it up and pull lanyard out. Put the luminaire aside.

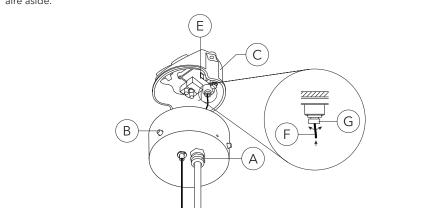

5) Prepare the mounting surface, guide connection line(s) through cable bushing(s) **H** and fixing ceiling mount section **C** to ceiling with screws **I**.

Fixture should be anchored into a structural element, if not anchored directly to recessed junction box.


**ATTENTION:** Ensure not to damage any electric cable, water pipe or other devices while drilling holes.

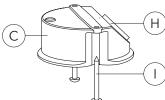



6) Check that rating shown on luminaire label conforms with mains electrical supply.


(example)



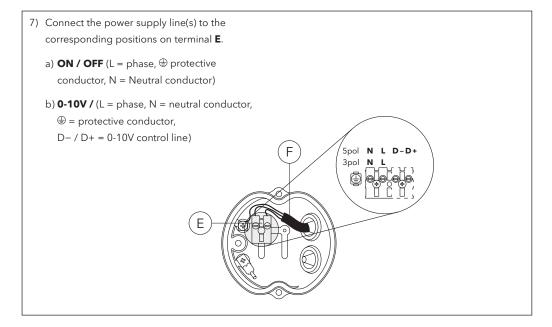

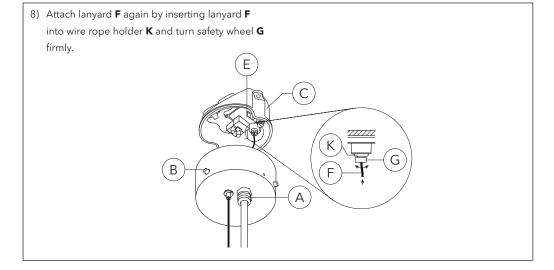

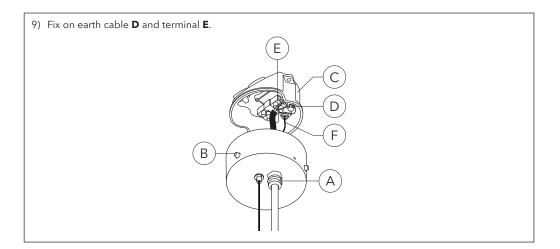

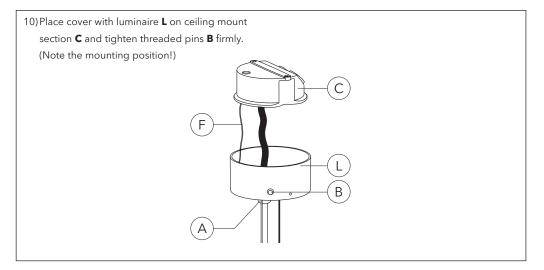

- 11) When using a diffusion lens IO-180, the light distribution must be observed during installation! (See image)
- 12)Loosen cable glands **A** only to adjust the height.

## DAS110-PM

