

we-ef



WE-EF LEUCHTEN

Installation and Maintenance
Instructions


Post Mounted Luminaire

RFL530-SE

RFL540-SE



Post Mounted Luminaire

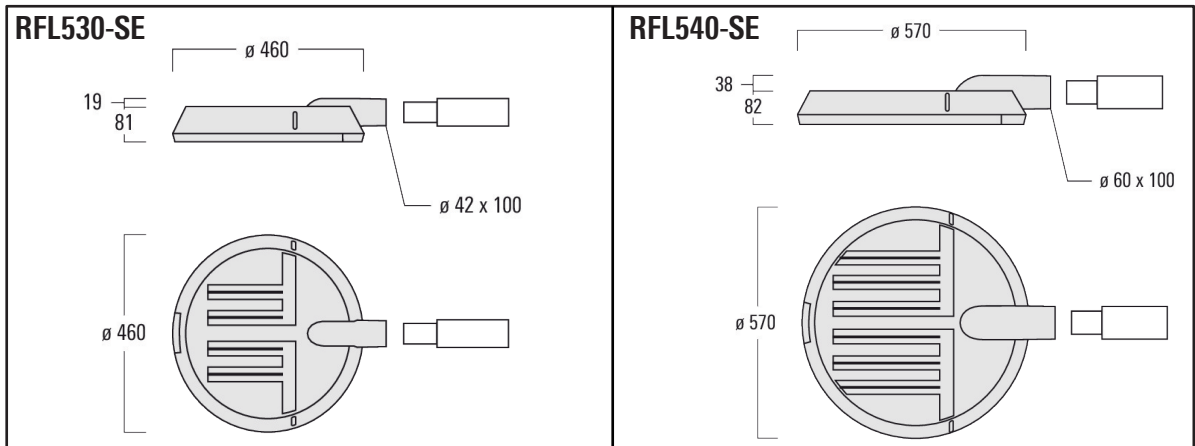

IP66, Class I, II, $t_a = 25^\circ\text{C}$

Mounting height:3-8 m

Weight: RFL540-SE..... max. 15,0 kg

..... RFL530-SE max. 9,3 kg

Light Source

RFL530-SE LED: 12 LED 13W / 24 LED 26W (350 mA)

..... 12 LED 28W / 24 LED 55W (700 mA)

RFL540-SE LED: 36 LED 38W / 48 LED 51W (350 mA)

..... 36 LED 82W / 48 LED 109W (700 mA)

Maintenance

Apart from cleaning the outside of the luminaire no special maintenance work is necessary.

Clean only with a cloth and water.

Do not use high pressure washers

Installation

The luminaire must be installed and maintained by a suitably qualified person in compliance with latest construction and electrical regulations and relevant legislation.


Claims based on defects attributable to improper installation, application, operation and/or any modification carried out by the purchaser or third parties, and the consequences thereof, are excluded.

Attention: Dangerous voltage, open luminaire only after mains electrical supply is switched off!

Important: The luminaire is factory-sealed and does not need to be opened during installation.

Installation procedure

- 1) Switch off mains electrical supply.
- 2) Compare the local voltage with data mentioned on the label of the luminaire packaging in these instructions and/or marked on the luminaire.
- 3) Pull the supplied and fitted cable **C** through the pole.
- Note: Follow steps 4 & 5 for Luminaires fitted with a NEMA cell/Shorting cap, for all others jump to step 6**
- 4) Remove the plastic cap **F** from NEMA cell base.
- 5) Fit PE cell or shorting cap **G** onto NEMA cell base by lining up plugs on PE cell or shorting cap to sockets on NEMA cell base and turning clockwise to lock in place.
- 6) Attach the luminaire on the pole or bracket **D** and tighten the fixing screws **E**, tightening to a torque of 5 Nm.
- 7) Unless ordered with an internal SPD, the flex must be connected to the terminals of the provided remote SPD behind the door at the base of the pole as per the SPD Installation Instructions
- 8) **Disassembly** Reversal of assembly.

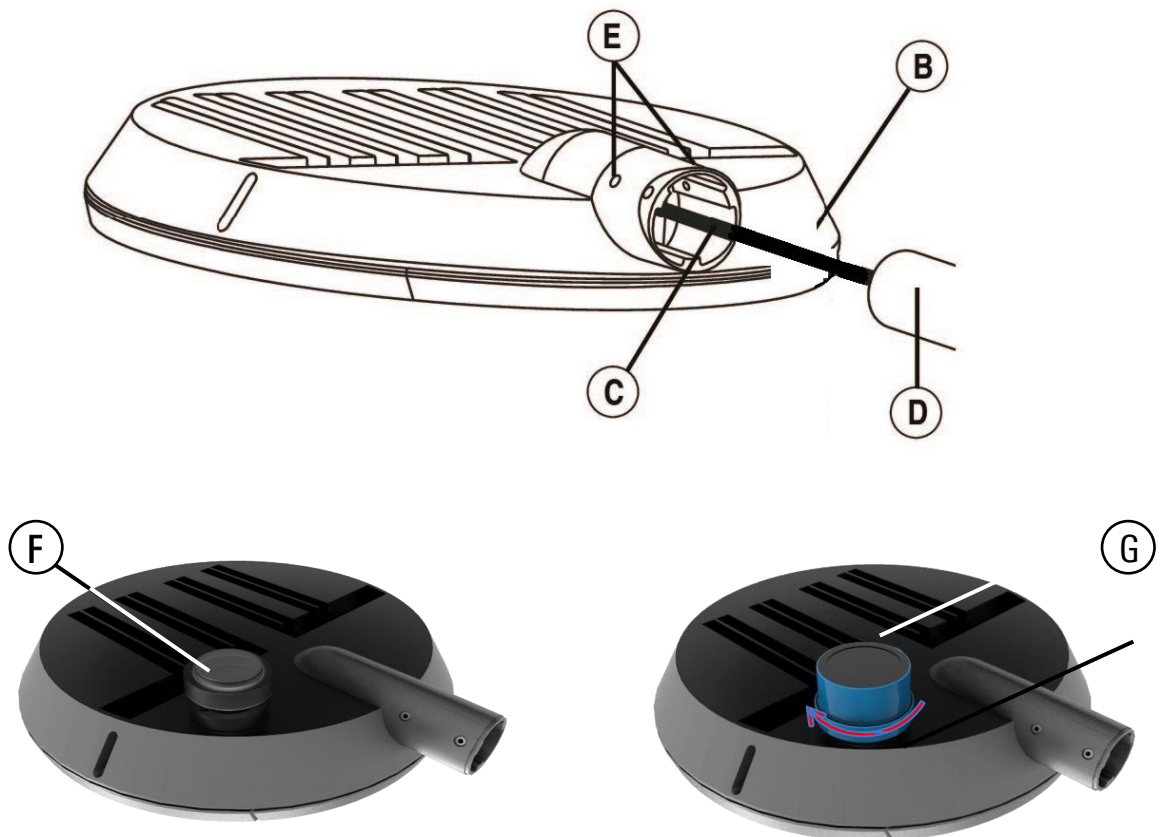



www.we-ef.com

WE-EF LEUCHTEN

Germany

Tel +49 5194 909 0

Fax +49 5194 909 299

info.germany@we-ef.com

WE-EF LUMIERE

FRANCE

Tel +33 4 74 99 14 44

Fax +33 4 74 99 14 40

info.france@we-ef.com

WE-EF HELVETICA

Switzerland

Tel +41 22 752 49 94

Fax +41 22 752 49 74

info.switzerland@we-ef.com

WE-EF ILLUMINAZIONE

Italy

Tel +39 029 0092354

info.italy@we-ef.com

WE-EF LIGHTING

United Kingdom

Tel +44 844 880 5346

Fax +44 844 880 5347

info.uk@we-ef.com

WE-EF LIGHTING

United States of America

Tel +1 724 742 0030

Fax +1 724 742 0035

info.usa@we-ef.com

WE-EF LIGHTING

Thailand

Tel +66 2 738 9610

Fax +66 2 175 2174

info.asiapacific@we-ef.com

WE-EF LIGHTING

Australia

Tel +61 3 8587 0444

Fax +61 3 8587 0499

info.australia@we-ef.com

T09185W1013 © WE-EF 2013

Technical specifications are
subject to change.

