



WE-EF LEUCHTEN

Installation and Maintenance Instructions

Inground Luminaire

ETC310-FS LED

EVC310-FS LED

ETC319-FS LED

EVC319-FS LED



Do not open during installation

This product is factory-sealed.
Refer to the instructions contained in this document for details.



Surge Protection



This product features built-in surge protection circuitry in compliance with applicable standards.

For comprehensive protection of a luminaire installation against lightning and electrical surges, it is essential to cover mains supply and data input lines at the distribution board level, by using respective primary (Type 1) and secondary (Type 2) surge arrestors in compliance with EN61643-11/ IEC61643-1.

Warning

Ensure that all required surge protection measures are in place and activated prior to luminaire installation. Also, disconnect luminaires before operating high-power devices such as, for example, electrical arc welders.

Inground Luminaire
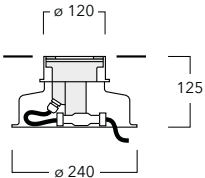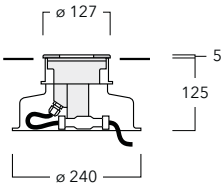
<p>ETC310-FS/ETC319-FS</p>  <p>Technical drawing of the ETC310-FS/ETC319-FS luminaire. It shows a cross-section of the luminaire with a mounting bracket. Dimensions are indicated: a top diameter of $\varnothing 120$, a mounting hole diameter of 125, and a base diameter of $\varnothing 240$. Two cables are shown exiting from the bottom of the luminaire.</p>	<p>EVC310-FS/EVC319-FS</p>  <p>Technical drawing of the EVC310-FS/EVC319-FS luminaire. It shows a cross-section of the luminaire with a mounting bracket. Dimensions are indicated: a top diameter of $\varnothing 127$, a mounting hole diameter of 125, a base diameter of $\varnothing 240$, and a small dimension of 5. Two cables are shown exiting from the bottom of the luminaire.</p>
--	--

IP68, Class I, $t_a \leq 25^{\circ}\text{C}$ for ETC310-FS/EVC310-FS
 $t_a \leq 40^{\circ}\text{C}$ for ETC319-FS/EVC319-FS

Light Source

LED

Maintenance

Apart from cleaning the product's exterior surfaces, no special maintenance work is required.

Do not use high-pressure cleaners.

In case of component failure due to abnormal circumstances or at end of life, replacement must be carried out by a suitably qualified and trained professional.

Warning: Do not open luminaire while mains supply is switched on.

Installation

The product must be installed and maintained by a suitably qualified professional in compliance with latest building/construction and/or electrical regulations and relevant legislation.

Warning: Switch off mains electrical supply prior to installing and connecting the luminaire.

Notice: If the luminaire is modified by anybody other than the original manufacturer, then the warranty will no longer be valid and shall become the full responsibility of the modifying person/organisation. Claims based on defects attributable to improper installation and/or application, and the consequences thereof, are excluded.

Attention: The luminaire is factory-sealed and does not need to be opened during installation.

The installation on site must comply with local and/or national health and safety regulations.

Installation Methods

Attention: The luminaire is factory-sealed and does not need to be opened during installation.

For proper installation, use the supplied installation blockout.

Ensure that proper drainage is provided for the shown installation methods:

In landscape/paved areas, sand or concrete with gravel base (Fig. I).

With fully concreted installation, drainage piping must be provided (Fig. II).

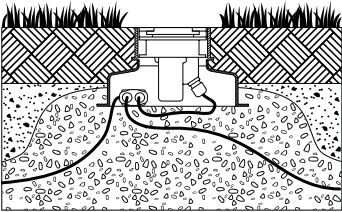


Fig. I

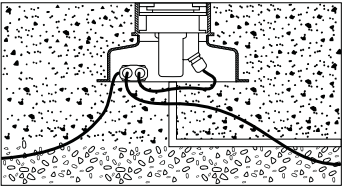


Fig. II

Phase One

Blockout Installation Procedure

(during earth or masonry work)

- 1) Ensure that proper drainage is provided for the shown installation methods.
- 2) Ensure a suitable recess is provided to accommodate installation blockout/mounting ring assembly **B/M**.
- 3) Test drainage (ensure water drains within 30 mins,

Warning: warranty void if luminaire installed without appropriate drainage).

- 4) Set installation blockout/mounting ring assembly **B/M** in position and ensure that:
 - a) Arrow **R** on mounting ring **M** is pointed towards the object to be illuminated (wall, tree, column).
 - b) Mounting ring **M** is flush with surface **F**. If the floor will be tiled or paved afterwards, leave an appropriate gap.
 - c) Mains supply cable(s) **O** is of sufficient length to connect sealable junction box **J** with cable **E** from luminaire.
- 5) During ongoing earth and/or masonry works, do not remove stickers on fixing thread holes **D**. Ensure that installation blockout/mounting ring assembly **B/M** is not damaged and has maintained its original shape.
- 6) Framing should be installed to prevent vegetation from growing over the lens.

Phase Two

Luminaire Installation and Electrical Connection

- 7) Switch off mains electrical supply.
- 8) Check that rating shown on luminaire label conforms with mains electrical supply.
- 9) Terminate cable **E** from luminaire housing **A** and mains supply cable **O** (for individual wiring) or branch cable (for through wiring) in sealable junction box **J** – to connect cable(s). Follow the sealable junction box termination instruction included in the packaging.
- 10) Peel-off stickers on fixing thread holes **D**. Set cables and sealable junction box **J** inside installation blockout/mounting ring assembly **B/M**.

For wallwash illumination only

Ensure the arrow indicated on the sticker is facing the illuminated surface (Fig. IV)

- 11) Loosen countersunk screws **C** (do not turn out). Insert mounting lever **L** between head of countersunk screws **C** and cover lens. Place luminaire housing **A** into installation blockout/mounting ring assembly **B/M** (Fig. V) while aligning holes **D** on mounting ring **M**.
Warning: When luminaire is placed inside installation blockout **B**, ensure there is no stress on sealable junction box **J** or electric cables (Fig. III).
- 12) Tighten countersunk screws **C** 'hand-tight'.

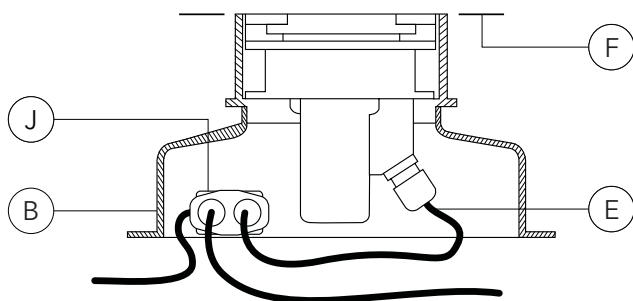
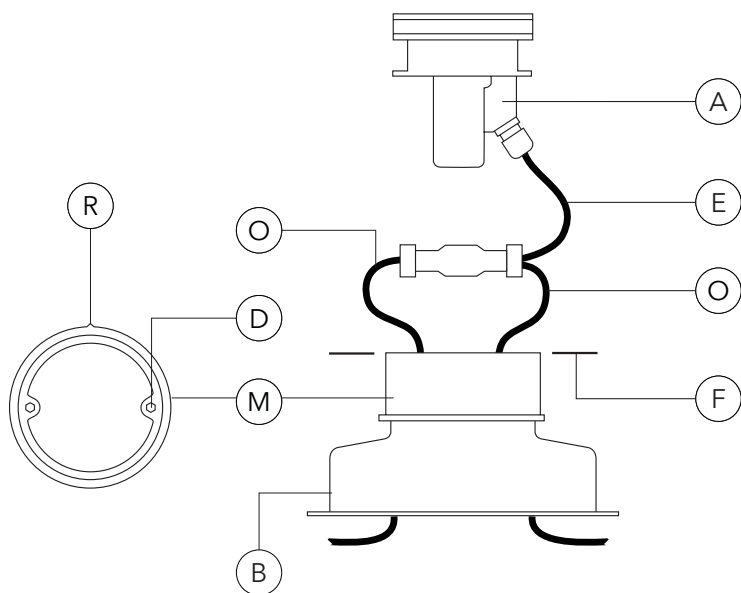


Fig. III

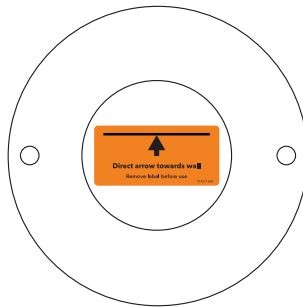


Fig. IV

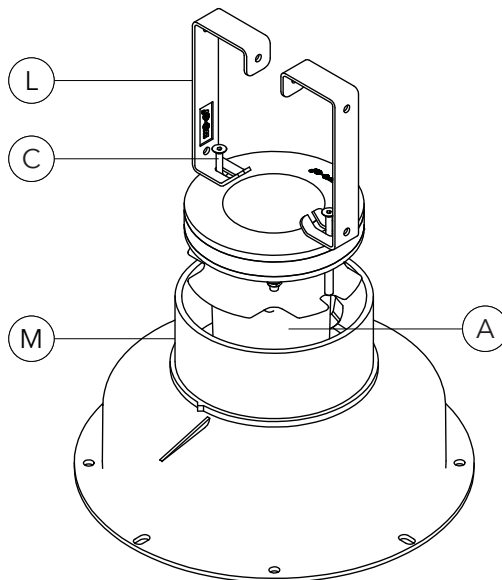


Fig. V



www.we-ef.com

WE-EF LEUCHTEN

Germany

Tel +49 5194 909 0

Fax +49 5194 909 299

info.germany@we-ef.com

WE-EF LUMIERE

France

Tel +33 4 74 99 14 44

Fax +33 4 74 99 14 40

info.france@we-ef.com

WE-EF SWITZERLAND

Switzerland

Tel +41 22 752 49 94

Fax +41 22 752 49 74

info.switzerland@we-ef.com

WE-EF LIGHTING

Thailand

Tel +66 2 738 9610

Fax +66 2 175 2174

info.asiapacific@we-ef.com

WE-EF LIGHTING

Australia

Tel +61 3 8587 0444

Fax +61 3 8587 0499

info.australia@we-ef.com

WE-EF LIGHTING

United States of America

Tel +1 724 742 0030

Fax +1 724 742 0035

info.usa@we-ef.com

TO9195W0823 © WE-EF 2023

Technical specifications are
subject to change.