



## WE-EF LEUCHTEN

Installation and Maintenance  
Instructions

Pole Mounted Luminaire

**ZFT400**

**ZAT400**



### **Do not open during installation**

This product is factory-sealed.

Refer to the instructions contained in this document for details.



### **Surge Protection**


This product features built-in surge protection circuitry in compliance with applicable standards.

For comprehensive protection of a luminaire installation against lightning and electrical surges, it is essential to cover mains supply and data input lines at the distribution board level, by using respective primary (Type 1) and secondary (Type 2) surge arrestors in compliance with EN61643-11/ IEC61643-1.

### **Warning**

Ensure that all required surge protection measures are in place and activated prior to luminaire installation. Also, disconnect luminaires before operating high-power devices such as, for example, electrical arc welders.

## Pole Mounted Luminaire

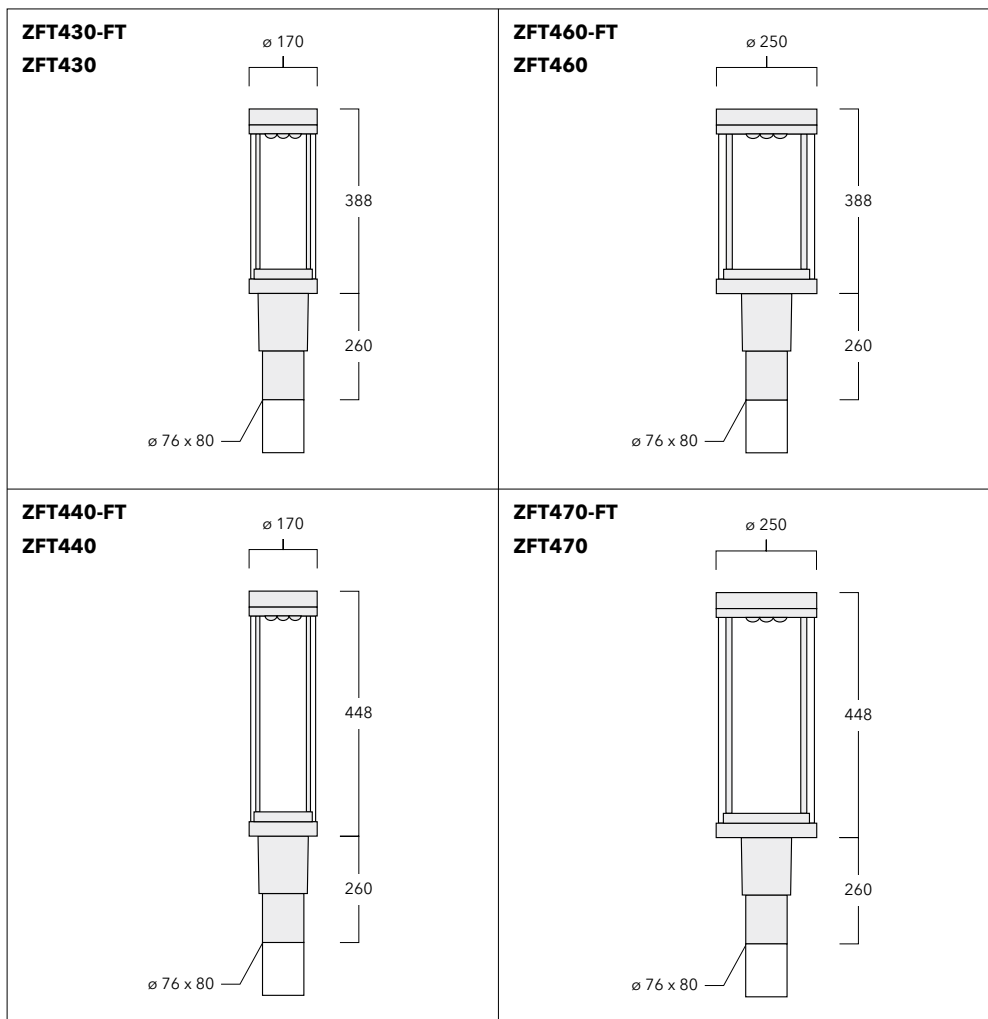

IP66. IK08/IK09. Class I.  $t_a = 25^\circ\text{C}$





### Weight

	kg
for ZFT430-FT/430	5.5
for ZFT440-FT/440	5.6
for ZFT460-FT/460	7.2
for ZFT470-FT/470	7.3

### Tools required

- 4 mm allen key
- wire cutter



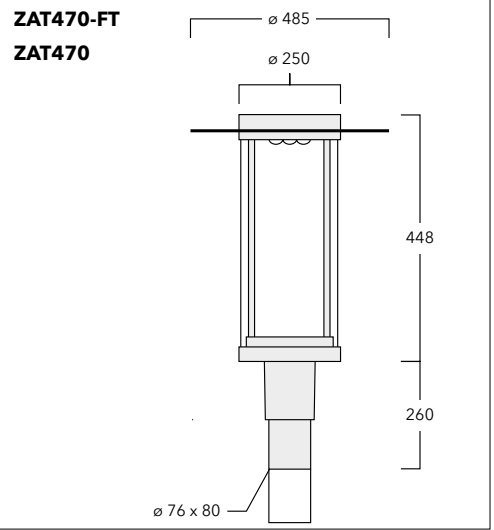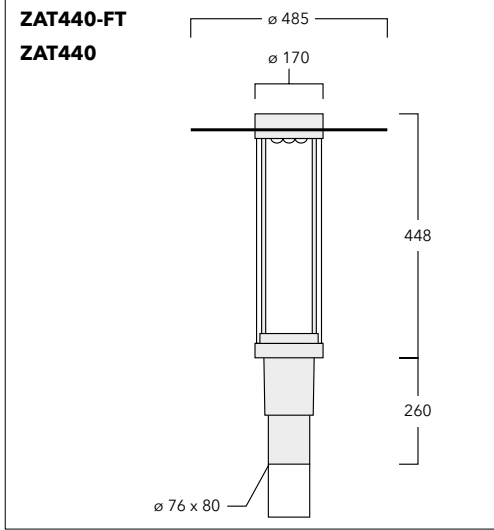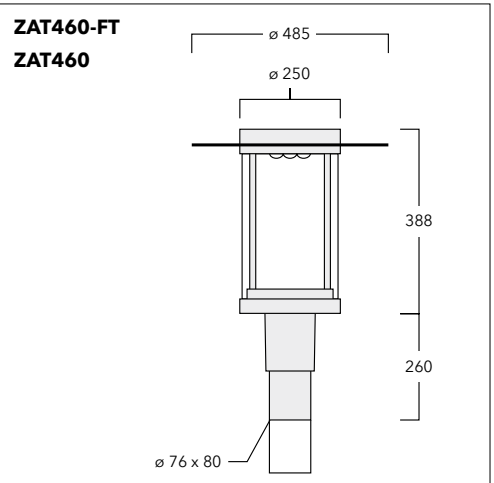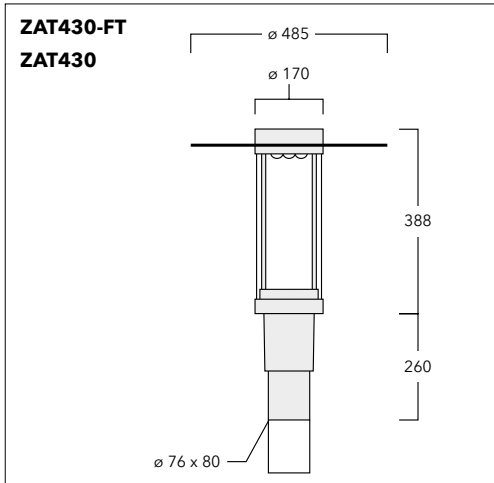

Weight	kg
for ZAT430-FT/430	7.7/7.8
for ZAT440-FT/440	7.8/7.9
for ZAT460-FT/460	9.7/10.5
for ZAT470-FT/470	9.9/10.6

**Tools required**

- 4 mm allen key
- wire cutter



**Light Source**

LED

**Maintenance**

Apart from cleaning the product's exterior surfaces, no special maintenance work is required.

Do not use high-pressure cleaners.

In case of component failure due to abnormal circumstances or at end of life, replacement must be carried out by a suitably qualified and trained professional.

**Warning:** Do not open luminaire while mains supply is switched on.

## **Installation**

The product must be installed and maintained by a suitably qualified professional in compliance with latest building/construction and/or electrical regulations and relevant legislation.

**Warning:** Switch off mains electrical supply prior to installing and connecting the luminaire.


**Notice:** If the luminaire is modified by anybody other than the original manufacturer, then the warranty will no longer be valid and shall become the full responsibility of the modifying person/organisation. Claims based on defects attributable to improper installation and/or application, and the consequences thereof, are excluded.

**Attention:** The luminaire is factory-sealed and does not need to be opened during installation.


The installation on site must comply with local and/or national health and safety regulations.

## Installation Procedure

- 1) Switch off mains electrical supply.

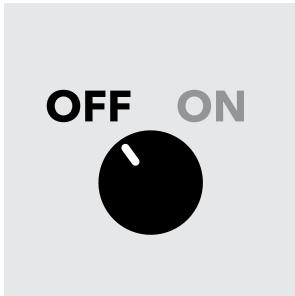

- 2) Check that rating shown on luminaire label conforms with mains electrical supply.

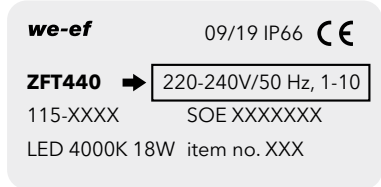

(example)

- 3) Connect mains supply cable leads to the provided separate connector as shown in fig. 1 to fig. 4  
1 = Phase (L), N = Neutral (N), 2 = DA+, 3 = DA-, ⊕ = Earthing (PE).

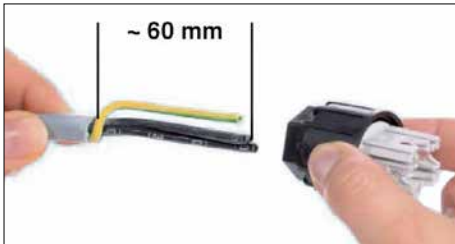


fig. 1



fig. 2

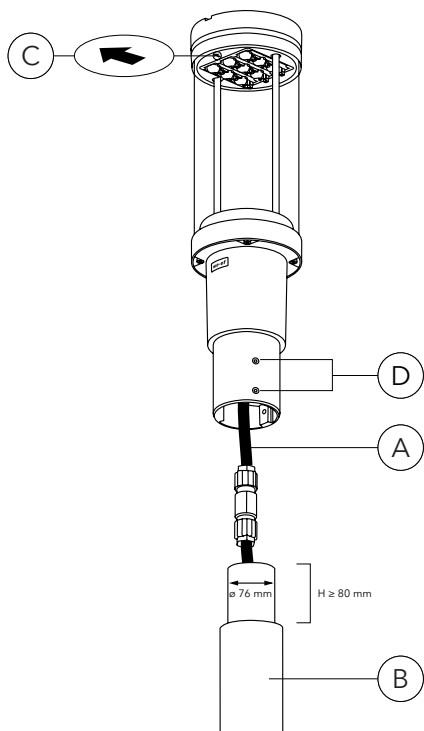


fig. 3



fig. 4

- 4) Feed mains cable **A** into column **B**, while setting luminaire in position by following the orientation indicator **C**. Tighten set screws **D**.



# **we-ef**

**www.we-ef.com**

## **WE-EF LEUCHTEN**

Germany

Tel +49 5194 909 0

Fax +49 5194 909 299

info.germany@we-ef.com

## **WE-EF LUMIERE**

France

Tel +33 4 74 99 14 44

Fax +33 4 74 99 14 40

info.france@we-ef.com

## **WE-EF SWITZERLAND**

Switzerland

Tel +41 22 752 49 94

Fax +41 22 752 49 74

info.switzerland@we-ef.com

## **WE-EF LIGHTING**

Thailand

Tel +66 2 738 9610

Fax +66 2 175 2174

info.asiapacific@we-ef.com

## **WE-EF LIGHTING**

Australia

Tel +61 3 8587 0444

Fax +61 3 8587 0499

info.australia@we-ef.com

## **WE-EF LIGHTING**

United States of America

Tel +1 724 742 0030

Fax +1 724 742 0035

info.usa@we-ef.com

TO9265W1024 © WE-EF 2024

Technical specifications are  
subject to change.