

we-ef

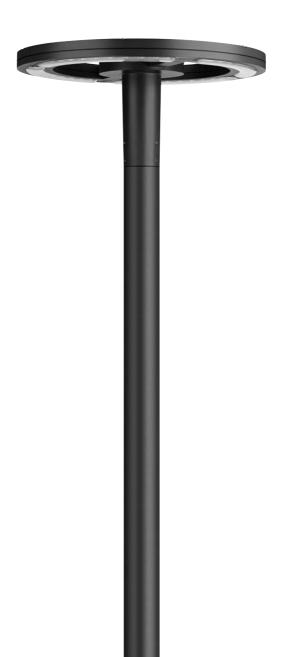

WE-EF LEUCHTEN

Installation and
Maintenance Instructions for
Post Top Luminaire
CFT500 LED Series

Post Top Luminaires

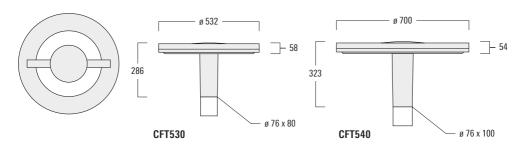

Lamps

CFT530 24 LED 24W / 48W*
CFT540 36 LED 36W / 72W / 108W*

* Nominal power; for latest data refer to www.we-ef.com

Ø 9 - 14 mm $\frac{1}{4}$

Protection: IP66, IK08 Class I, II, ta = 25°C

Weight:

Windage area:

CFT530 max. 0,16 m²
CFT540 max. 0,24 m²

Tools required

- 4 mm Allen key
- diagonal cutting pliers
- Screwdriver with 4.0 mm x 1.0 mm blade

Luminaire Orientation



with [R] lens



with [C50] lens

Installation

The luminaire should be installed and maintained by a suit-ably qualified person in compliance with latest electrical regulations and relevant legislation.

 ${\it 4 \over 4}$ Attention: Dangerous voltage, open luminaire only after mains electrical supply is switched off!

The luminaire does not need to be opened for installation.

The LED module should only be replaced by a qualified technician.

Installation Procedure


- 1) Switch off the mains electrical supply 4
- 2) Feed cable down pole from top and fit lluminaire onto top of pole.
- 3) Orient luminaire in correct direction and tighten fixing screws. (Max 15Nm.)
- install Surge Protection Device at base of pole referring to specific instructions contained in this manual and terminate luminaire into Surge Protection Device.

Product Information / Surge Protection

This luminaire is supplied with a surge protection device of type 2-3 for fitment at the base of the pole. The technical data is provided directly on the installed device. If the power supply is switched on, a green LED indicates that it is operational. If the surge protector has been triggered by an adverse event, the luminaire is automatically disconnected from the mains. In that case, the LED on the surge protector no longer lights up.

For comprehensive protection of the luminaire against lightning and electrical surges, primary (Type 1) and secondary (Type 2) surge arrestors must be installed into the power supply. We recommend a combination arrestor (Type 1+2+3), which is installed in the control cabinet.

The technical planner/installer is responsible for the proper selection, sizing and installation of the surge protection modules that must be provided on site. Please note the various protection levels for Class I and II, as well as the applicable statutory provisions regarding surge protection. Installation and maintenance may only be performed by a qualified electrician.

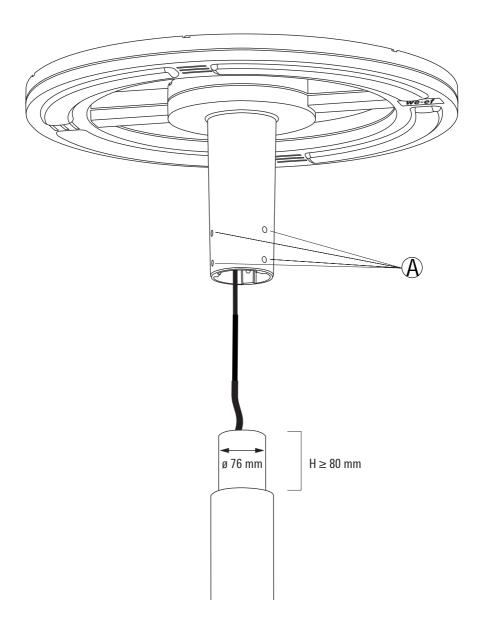


Maintenance


Apart from cleaning the outside of the luminaire no special maintenance work is necessary.

Technical Data

GB

- Installation must be performed only by electrically
- National electrical installation rules must be followed. - The unit must be used only as surge protector and according the conditions described in this document.
 - Surge protectors must be selected in relation with an dedicated AC network (see Table 1)
 - Dedicated fuses must be installed in the surge protector branch (see Table 2).
- In case of red indicator, the surge protector must be

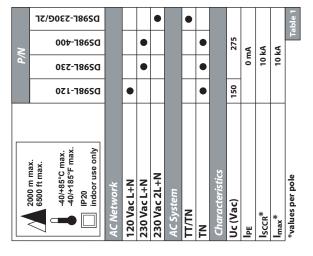

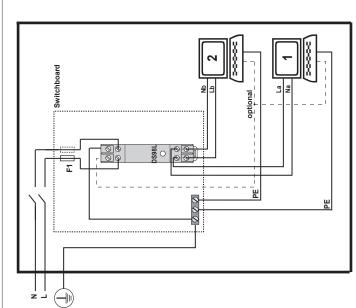

0.5 Nm 4.4 Lb-In

0

/ 10 mm / 0.4 in

10 mm \ 0.4 in

0

Clip on symmetrical DIN rail

0.5-2.5mm² #20-13 AWG

7

Installation


Application example




#20-13 AWG 0.5-2.5mm²

3



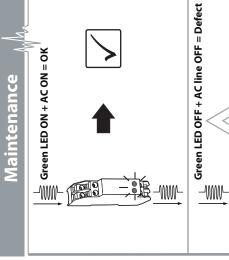

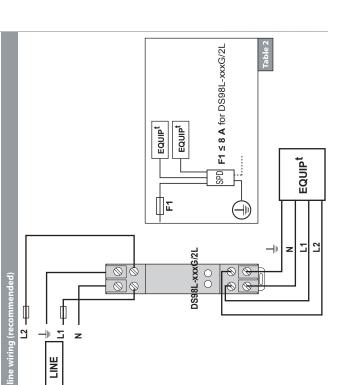

E - M



DS98L SERIES

Wiring

we-ef

www.we-ef.com

WE-EF LEUCHTEN

Germany

Tel +49 5194 909 0

Fax +49 5194 909 299

info.germany@we-ef.com

WE-EF LUMIERE

France

Tel +33 4 74 99 14 44

Fax +33 4 74 99 14 40

info.france@we-ef.com

WE-EF HELVETICA

Switzerland

Tel +41 22 752 49 94

Fax +41 22 752 49 74

info.switzerland@we-ef.com

WE-EF LIGHTING

United Kingdom

Tel +44 844 880 5346

Fax +44 844 880 5347

info.uk@we-ef.com

Safety information

The manufacturer is discharged from liability when damage is caused by improper use or installation.

If any luminaire and/or accessory is subsequently modified, the persons responsible for the modification shall be considered as the manufacturer

CFT500_010916 / 006-1200-Au

Technical specifications are subject to change.

© WE-EF 2016

WE-EF LIGHTING

Thailand

Tel +66 2 738 9610

Fax +66 2 175 2174

info.asiapacific@we-ef.com

WE-EF LIGHTING

Australia

Tel +61 3 8587 0444

Fax +61 3 8587 0499

info.australia@we-ef.com

WE-EF LIGHTING

United States of America

Tel +1 724 742 0030

Fax +1 724 742 0035

info usa@we-ef com