

we-ef

WE-EF LIGHTING USA LLC

410-D Keystone Drive
Warrendale, PA 15086
USA
Tel +1 724 742 0030
Fax +1 724 742 0035
info.usa@we-ef.com
www.we-ef.com

we-ef

WE-EF LIGHTING USA LLC


Installation and Maintenance
Instructions for Surface Mounted Wall Luminaires
QLS410 / QLS410 LED / QLS410 XT




Technical specifications are subject to change
© WE-EF 2013

**Installation and Maintenance
Instructions for
Surface Mounted Wall Luminaires:**

QLS410 / QLS410 LED

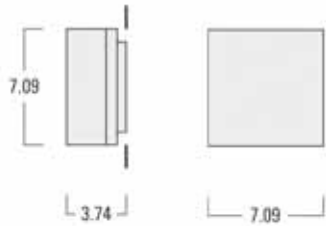

QLS410 XT

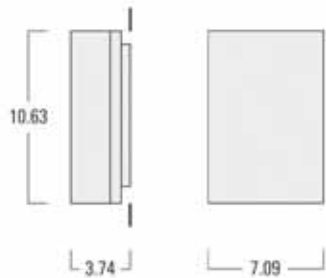

Light source:

CMH 22 - 2x22W
QT 50W
LED 6W

This product should be installed in accordance with the applicable installation code by a person familiar with the construction and operation of the product and the hazards involved. Be sure the electrical supply is off prior to installation.

These fixtures are intended to be mounted over a recessed 4" octagon box.

- 1.) Open the carton and remove the Luminaire assembly.
- 2.) Remove ballast compartment **A** from housing **B** by loosening screws **C**.
- 3.) Pull the power supply leads (by others) through the center hole in ballast compartment **A** and insure that ballast compartment **A** is oriented properly with the "this side up label" on top. Attach the ballast compartment **A** over the recessed 4" octagon box through the (4) .25" dia. Holes with fasteners **F** (provided by others). Insure that the gasket provided on the back of ballast compartment **A** completely covers the recessed junction box.
- 4.) Check that the electrical supply conforms with the ratings shown on the fixture labels and leads extending from the fixture. Make the electrical connection to the terminal block inside the ballast compartment **A**.

5.) Fit appropriate lamp **L**, as specified on the luminaire label, by inserting it firmly into the lamp holder inside the reflector cassette **N**.

6.) Reposition cover **B** through the two guide pins **N** on ballast compartment **A** and secure in position by evenly tightening screws **C**.

Lamp Replacement and Maintenance:

Do not open luminaire while in operation or while mains supply is switched on!

1. Switch off the electrical supply.
2. Open luminaire and clean all exterior surfaces.
3. Replace lamp
4. Check gasket for dirt and damage and clean or replace if necessary.
5. Close luminaire.

Protect our environment: Discard used lamps in compliance with the most recent environmental legislation.

