


DALI SPD Tray Installation Instructions


(Note: MCB, DIN rail, earth connector, and fixing hardware not supplied)




Attention: In the event that the installation is not in line with WE-EF installation instructions and not adequately protected with the supplied approved **Surge Protection Device**, WE-EF will accept no responsibility. In the event of SPD failure, the SPD must be replaced to maintain the warranty of the luminaire.

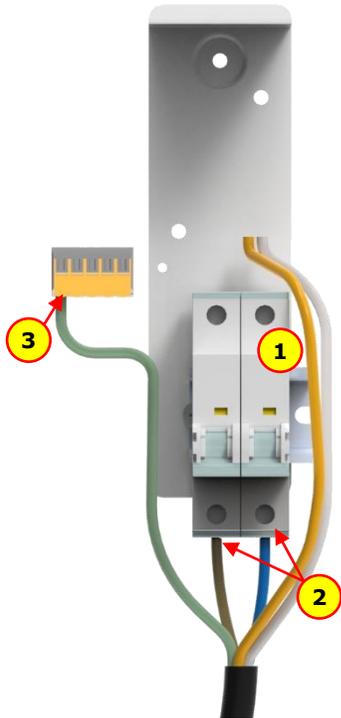


Attach DIN rail and MCB* (not supplied) to SPD tray (1) and terminate mains sub circuit leads accordingly (2,3).

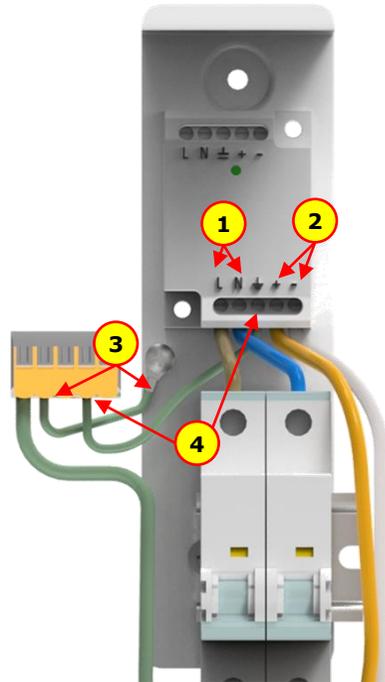

Connect Live and Neutral from MCB to unprotected side of supplied SPD (1), and DALI sub circuit leads to SPD (2). SPD should be earthed to the tray (3,4).

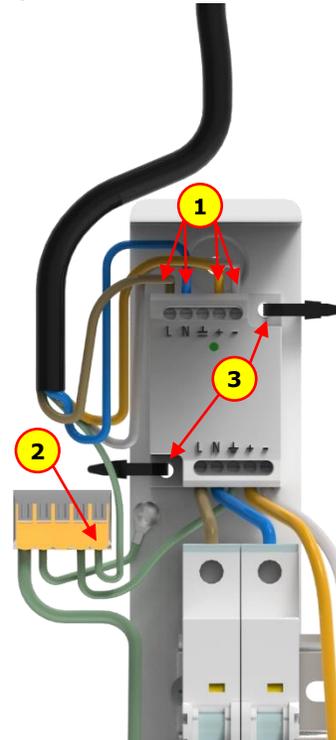

Connect Live, Neutral and DALI from luminaire to protected side of SPD (1), luminaire should be earthed to the tray (2), cable tie SPD onto tray (3).

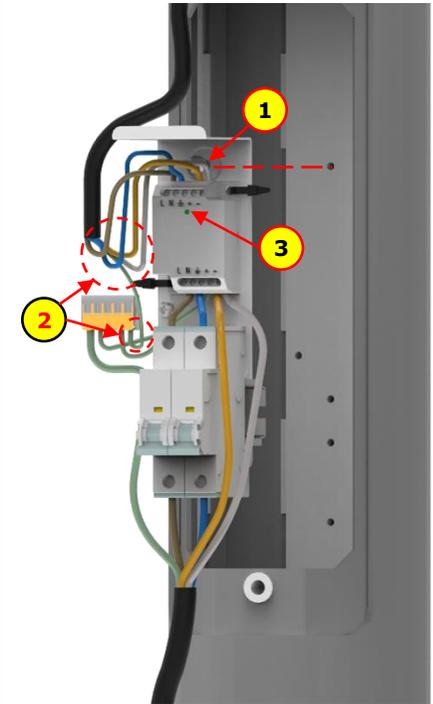

Secure SPD to pole tray using appropriate screw (1), luminaire cable should be **looped for anti drip (2)**. During operation, green light on SPD must be on, replace SPD if off (3).

*MCB or HRC Fuse is **Mandatory** to protect the SPD against overcurrent