

WE-EF LEUCHTEN
Installation and Maintenance
Instructions

RAIL66 Projector
RAIL66 version
FLC121 #7 LED
FLC131 #7 LED
FLC141 #7 LED

Space frame version
FLC121 #7 LED
FLC131 #7 LED
FLC141 #7 LED



Do not open during installation

This product is factory-sealed.
Refer to the instructions contained in this document for details.



Surge Protection

This product features built-in surge protection circuitry in compliance with applicable standards.



For comprehensive protection of a luminaire installation against lightning and electrical surges, it is essential to cover mains supply and data input lines at the distribution board level, by using respective primary (Type 1) and secondary (Type 2) surge arrestors in compliance with EN61643-11/IEC61643-1.

Warning


Ensure that all required surge protection measures are in place and activated prior to luminaire installation. Also, disconnect luminaires before operating high-power devices such as, for example, electrical arc welders.

RAIL66 Projector

FLC121

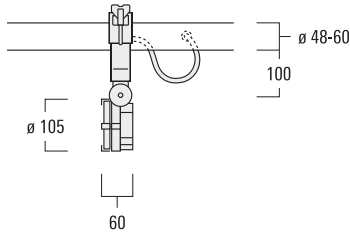



RAIL66 version

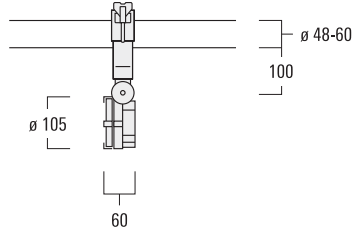


Space frame version

FLC131

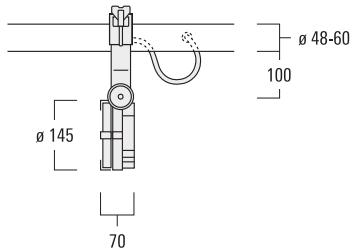



RAIL66 version

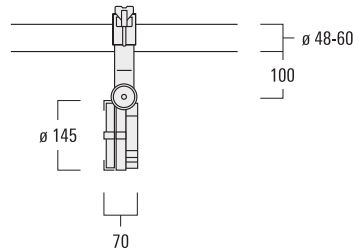


Space frame version

FLC141

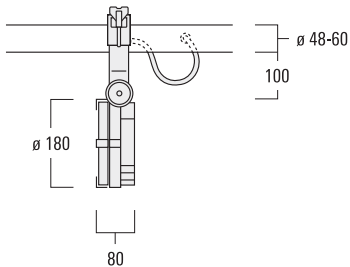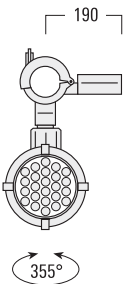

RAIL66 version

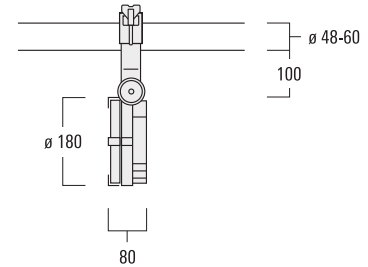

Space frame version

IP66, IK07, Class I, $t_a = 40^\circ\text{C}$

Light Source

LED

Maintenance

Apart from cleaning the product's exterior surfaces, no special maintenance work is required.

Do not use high-pressure cleaners.

In case of component failure due to abnormal circumstances or at end of life, replacement must be carried out by a suitably qualified and trained professional.

Warning: Do not open luminaire while mains supply is switched on.

Installation

The product must be installed and maintained by a suitably qualified person in compliance with the latest applicable regulations and relevant legislation.

Claims based on defects attributable to improper installation, application, operation and/or any modification carried out by the purchaser or third parties, and the consequences thereof, are excluded.

Attention: The housing A containing the LED light source is factory-sealed and does not need to be opened during installation.

Installation Procedure

Installation – RAIL66 version

Prior to installing the luminaire, mount and connect the selected RAIL66 mounting system in accordance with relevant installation instructions

- 1) Switch off mains electrical supply.
- 2) Check that rating shown on luminaire label conforms with mains electrical supply.
- 3) Determine desired position of luminaire A on rail X, dependent on aiming requirements and proximity to a suitable mains outlet Y.
- 4) Attach clamp B to rail X. Tighten wingnut C.
- 5) Remove protective cover Z from mains outlet Y. Insert in-line connector G and tighten.


Attention: On any mains outlet Y' that is not used, protective cover Z' must remain firmly secured. Check and ensure proper fit and tightness.

- 6) Loosen screws H and I slightly. Aim luminaire in desired direction, retighten screws H and I.


Installation – Space frame version

Suitable for space frame diameter 48-60 mm.

- 1) Switch off mains electrical supply.
- 2) Determine desired position of luminaire A on space frame X, dependent on aiming requirements.
- 3) Attach clamp B to space frame X. Tighten wingnut C.
- 4) Detach gear box cover D by loosening screws S.
- 5) Check that rating shown on luminaire label conforms with mains electrical supply.
- 6) Feed mains supply cable E through cable gland G (Fig. I).
- 7) Connect mains supply cable E leads to respective terminals in terminal connector K:
 - a) ON/OFF (L = Phase, N = Neutral, ⊕ = Earthing)
 - b) 1-10 V/DALI (L = Phase, N = Neutral, ⊕ = Earthing, DA/DA = DALI control line, D-/D+ = 1-10 V control line).
- 8) Reposition gear box cover D and secure in position by retighten screws S.
- 9) Loosen screws H and I slightly. Aim luminaire in desired direction, retighten screws H and I.

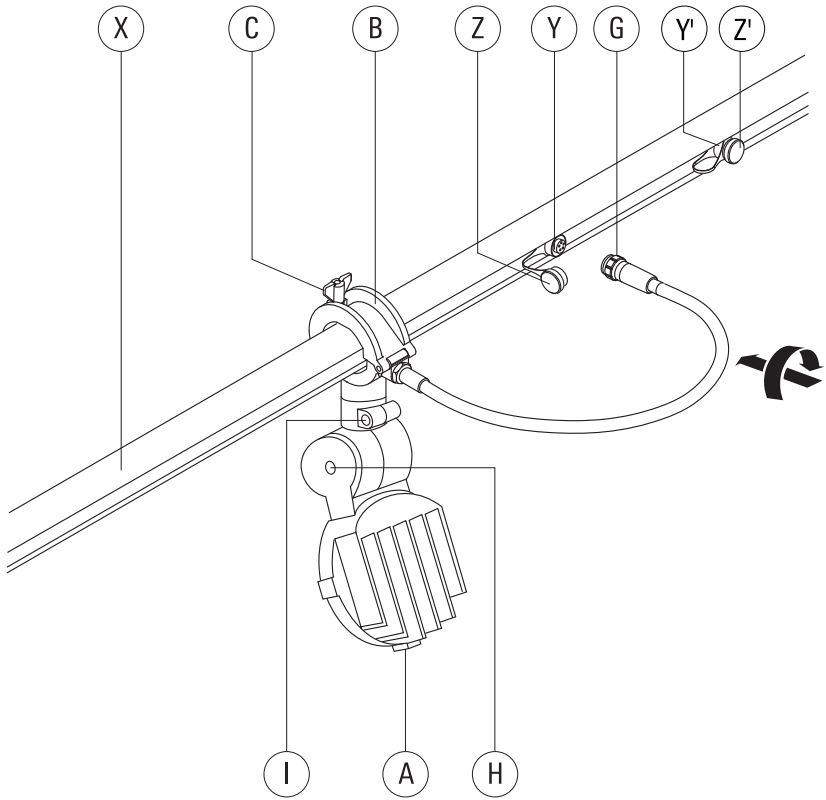

RAIL66 version

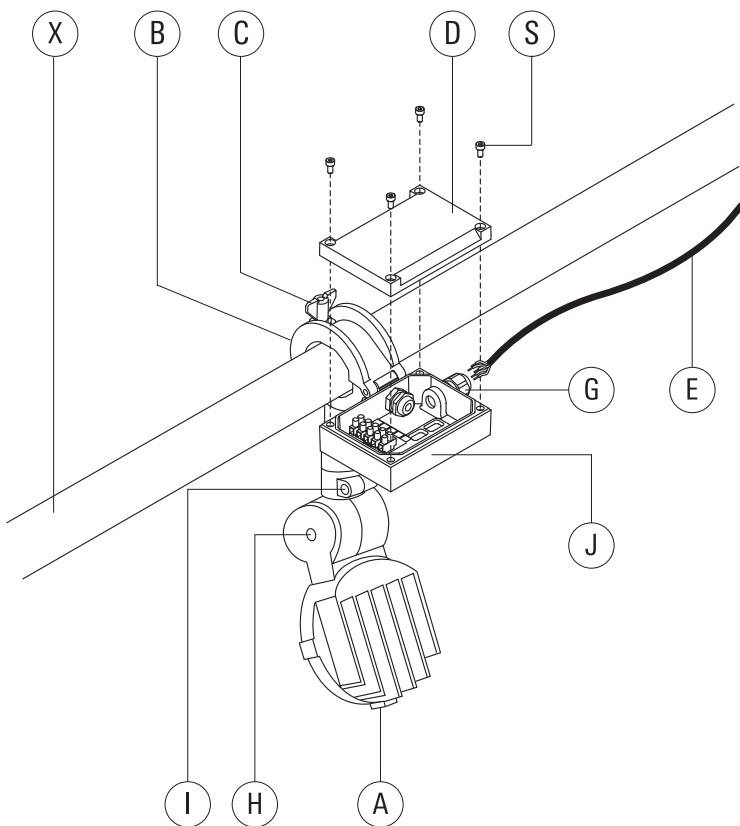

Space frame version



Fig. I. Feed mains supply cable through cable gland

we-ef

www.we-ef.com

WE-EF LEUCHTEN

Germany

Tel +49 5194 909 0

Fax +49 5194 909 299

info.germany@we-ef.com

WE-EF LIGHTING

Thailand

Tel +66 2 738 9610

Fax +66 2 175 2174

info.asiapacific@we-ef.com

WE-EF LUMIERE

France

Tel +33 4 74 99 14 44

Fax +33 4 74 99 14 40

info.france@we-ef.com

WE-EF LIGHTING

Australia

Tel +61 3 8587 0444

Fax +61 3 8587 0499

info.australia@we-ef.com

WE-EF HELVETICA

Switzerland

Tel +41 22 752 49 94

Fax +41 22 752 49 74

info.switzerland@we-ef.com

WE-EF LIGHTING

United States of America

Tel +1 724 742 0030

Fax +1 724 742 0035

info.usa@we-ef.com

WE-EF LIGHTING

United Kingdom

Tel +44 844 880 5346

Fax +44 844 880 5347

info.uk@we-ef.com

T09209W0717 © WE-EF 2017

Technical specifications are
subject to change.